

Congratulations on purchase of the Swardman Electra battery-powered cylinder mower, which will significantly help you to care for your English-style lawn.

BEFORE YOU BEGIN

- Unbox the machine.
- Carefully read the user's manual and follow its recommendations.
- Assemble the handlebars and add on the grass box.
- Check the cut quality with a thin strip of office paper.

STARTING & MOWING

- Turn on the main power switch on the rear side of the mower.
- Press the OK button, the control lights on handlebars will light up.
- Press the LOCK button, the first LED light will start flashing. While it is still flashing, push the right lever within 1,5 s and the cylinder will start spinning.
- Push the left lever to activate the drive of the machine. The more you push, the faster will the machine go. You will achieve a smooth acceleration by handling the drive lever gently (comparable to clutch pedal in a car).
- Release the right lever to turn off the cutting cylinder.
- Release the left lever to stop the drive.
- When changing the direction, the speed can be controlled by the drive lever. Releasing the lever will slow down the machine.
- Change the speed using the + and - buttons. One push +/- 0.65 kmh (0.4 mph).
- When the speed is increased, the 2nd LED flashes.
- When the speed is decreased, the 1st LED flashes.
- Hold the + or - buttons to change speed faster.
- For reverse gear push the R button. At the same time, it is necessary to release the left lever.

TURNING OFF THE MOWER

- Release the control levers.
- Switch off the mower by pressing the main safety switch on the rear side of the mower.
- The LEDs will go out after 1 minute of inactivity.
- When the main power switch is turned off, LED lights go out immediately.

CARE

- Check and adjust the cut quality regularly.
- Regularly check and, if necessary, have the cylinder blades sharpened.
- Clean the machine from dirt after every use; never use pressure washers as you may lose the warranty on the machine.

CAUTION!

- Always follow the safety instructions listed in the user's manual.
- The handle of the cartridge it should be used for manipulation with the mower, only to remove the cartridge from the machine.
- When adjusting the mowing height and exchanging the cartridges, do not forget to loosen the locking screw on the right side of the mower and tighten it afterwards.
- Always charge the mower after work.
- Make sure that the ambient temperature of the storage area does not drop below 10°C (50°F) and does not exceed 50°C (125°F).
- Check the charging cable regularly; it can only be used when in impeccable condition.
- Wear protective gloves during operation and maintenance.



Tip:
For the best possible results, change the mowing directions with every mowing.

All details and recommendations on lawn care can be found at www.swardman.com or your local dealer. Your Swardman team.