




Aeroleveler Assembly Instructions

- 1.. Unpack and Prepare: Remove all lawn level components from the box. Pull out the Lower Handle **(A)** and Upper Handle **(B)** from the storage slots on the Level Base **(F)**. Remove the Storage Boots **(C)** from the same slots.
2. Attach Lower Handle: Unfasten the Handle-to-Base Bolts **(D)** and set them aside. Position the Lower Handle **(A)** between the now-vacant mounting holes, ensuring the Pneumatic Strut **(E)** is facing up. Insert the Handle-to-Base Bolts **(D)** through the Lower Handle **(A)** and refasten the nylon Locknuts **(G)**, making them snug but not too tight.
3. Secure Pneumatic Strut: Carefully remove the zip tie from the pneumatic strut eyelet. Once the strut arm is fully extended, unfasten the Mounting Bolt **(H)** and pull it halfway out. Adjust the Lower Handle **(A)** so the pneumatic strut arm is aligned with the threaded end of the Mounting Bolt **(H)**. Push the Mounting Bolt **(H)** through the eyelet and secure it with the nylon locknut.
4. Attach Upper Handle: Insert the Upper Handle **(B)** into the Lower Handle **(A)** and turn clockwise until tight.

Assembly Diagram

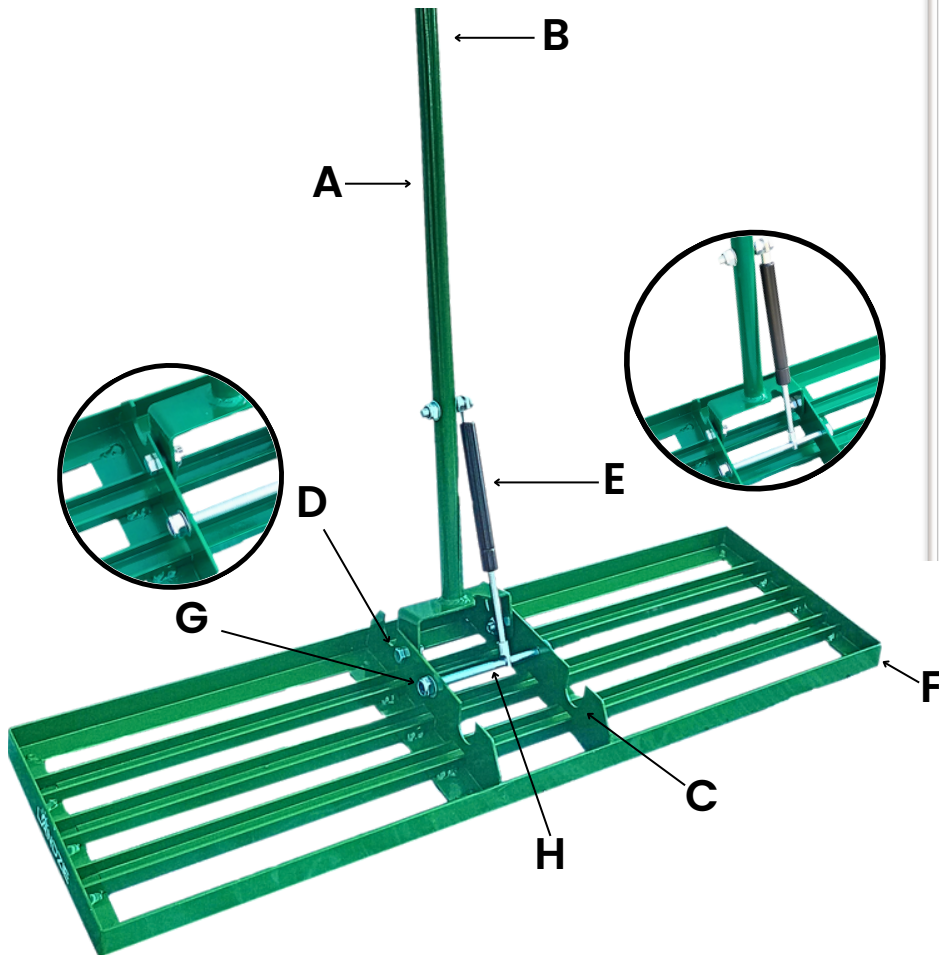

Items Included with Aeroleveler:

- (A) Lower Handle x1
- (B) Upper Handle x 1
- (C) Storage Boots x 4
- (D) Handle-to-Base-Bolts x 2
- (E) Pneumatic Strut x 1
- (F) Level Base x1
- (G) Nylon Lock Nuts x 3
- (H) Mounting Bolt x1

Scan QR
Code for
Assembly
Video

