









# Tow-Behind Spike Aerator Assembly Instructions

[support@landzie.com](mailto:support@landzie.com)


(856) 360-4823

## Parts List:

|                                                                                                                                                                                                                                                                                                                                           |                                                                                                                                                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                                                                                                           |                                                                                                                                                                                                                                                                                                                                                       |                                                                                                                                                                                                                            |                                                                                                                             |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| Hex Bolt x4<br>(A1)<br><br>Sm. Flat Washer x 4<br>(A2)<br><br>SM .Lock Nut x4<br>(A3)<br> | LG Hex Bolt x2<br>(B1)<br><br>MD. Flat Washer x 4<br>(B2)<br><br>MD. Lock Nut x2<br>(B3)<br> | Spindle x2<br>(C1)<br><br>Largest Washers x2<br>(C2)<br><br>LG Lock Nut x2<br>(C3)<br> | Spike Tine x 60<br>(D1)<br><br>Large Washers x60<br>(D2)<br><br>Split Lock Washer x 60<br>(D3)<br> | Clevis Pin x2<br>(E1)<br><br>Hairpin x 4<br>(E2)<br> | <br>SCAN ME<br>Watch Our Assembly Video! |
| Frame x1<br>(G)<br>                                                                                                                                                                                                                                      | Pull Handle x1<br>(H)<br>                                                                                                                                                                                                                                     | Frame Link x2<br>(I)<br>                                                                                                                                                                                                                                | Wheel x2<br>(J)<br>                                                                                                                                                                                                                                                 | Tow Hitch x1<br>(F)<br>                                                                                                                |                                                                                                                             |


## Step 1:

Start by sliding the first spindle (C1) through the side hole found on either side of the transport frame (G). Next, tighten down a spindle locknut (D3) to attach spindle (C1) to transport frame (G). Attach the wheel (J) to the spindle (C1) using the largest washer (C2) and cotter pin (E2).

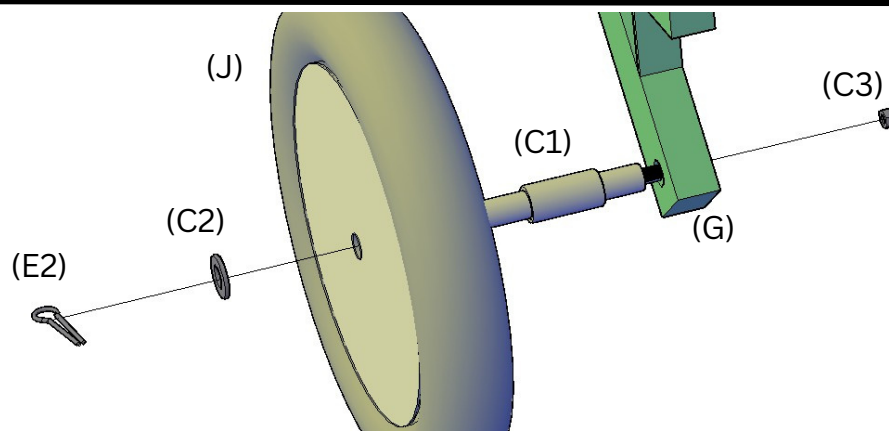


## Step 2:

Attach the tow hitch (F) to the transport frame (G) using 4 small hex bolts (A1), 4 small washers (A2), and 4 small lock nuts (A3). Add pull handle (H) to tow hitch (F) using clevis (E1) and cotter pins (E2).

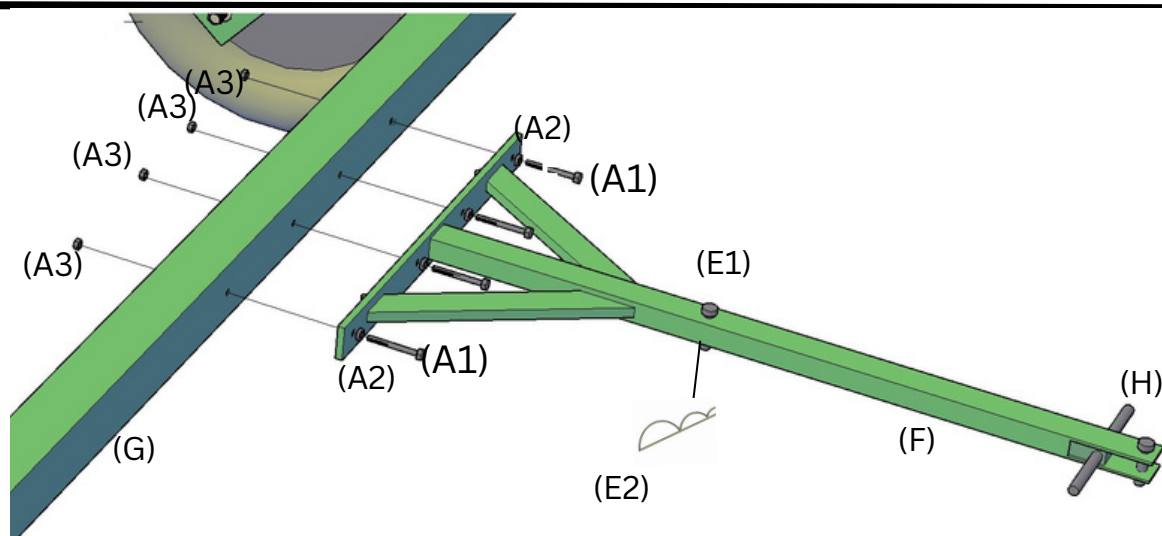


### Step 3:

Join the aerator barrel to the transport frame (**G**) using both frame links (**I**), medium hex bolts (**B1**), medium locknuts (**B3**), and flat washers (**B2**).

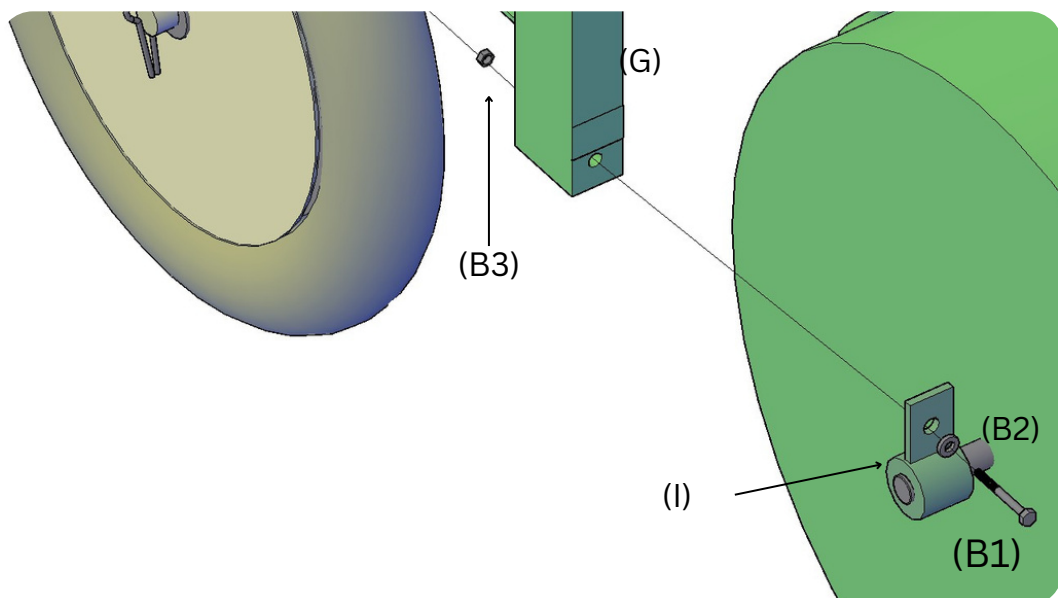


### Step 4:

With the aerator barrel successfully joined to the transport frame (**G**) add all spike tines (**D1**) to the aerator barrel. Ensure spike tines (**D1**) are tightened to compress split lock washers (**D3**) and large flat washers (**D2**) for proper installation.

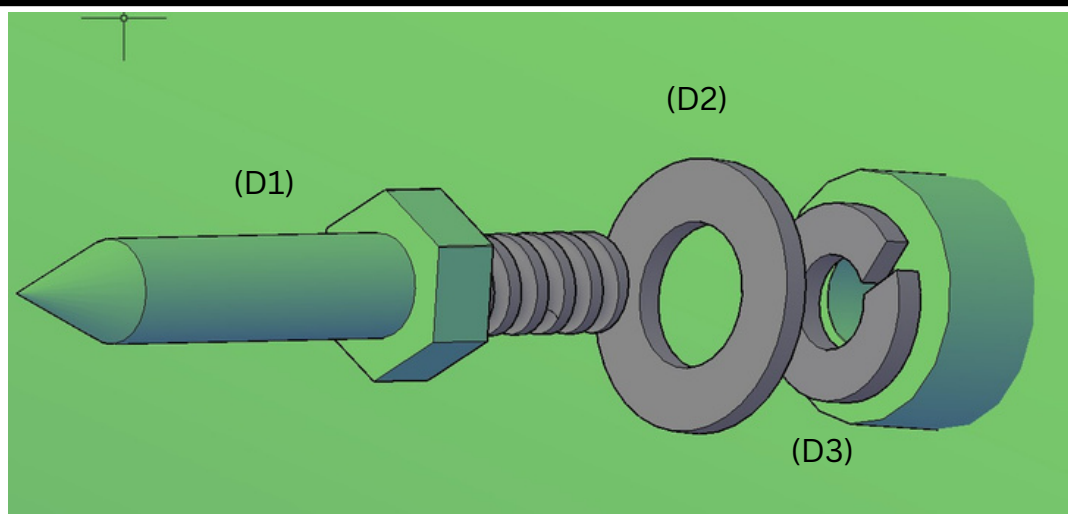

### Step 5

Lastly, using the now attached handle flip it so that wheels no longer touch ground. It is now ready to be towed for aeration.

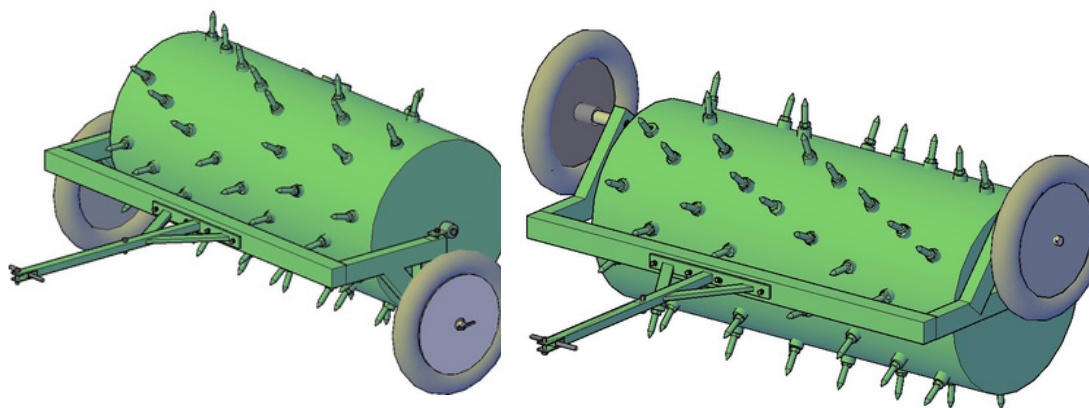

**Our Customer Support Team is Here to Help!**

Please give us a call at **(856) 360-4823** or send an email to **support@landzie.com** for further questions and assistance.