

LANDZIE

AeroCore Assembly Instructions



support@landzie.com



(856) 360-4823



Parts List:

Large Hex Bolt x4


Md. Flat Washer x4

Lock Nut x 4

Button Head Bolt x 7

Sm. Split Washer x7


Lg. Flat Washer x2

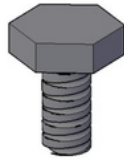

(A)



(B)

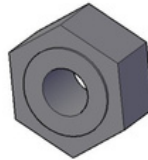

(C)



(D)



(E)



(F)

Hair Pin x2

Plate Mount

Top Handle

Middle Handle

Aeration Plate

Lower Handle

Tine x7



(G)




(H)



(I)



(J)

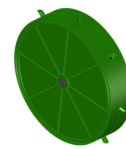

(K)




(L)



(M)


Step 1:

Assemble the AeroCore handle by attaching the middle handle (J) to the top handle (I) using 2 large hex bolts (A), 2 medium flat washers (B), and 2 lock nuts (C). Repeat this step when attaching lower handle (L) to the middle handle (J).

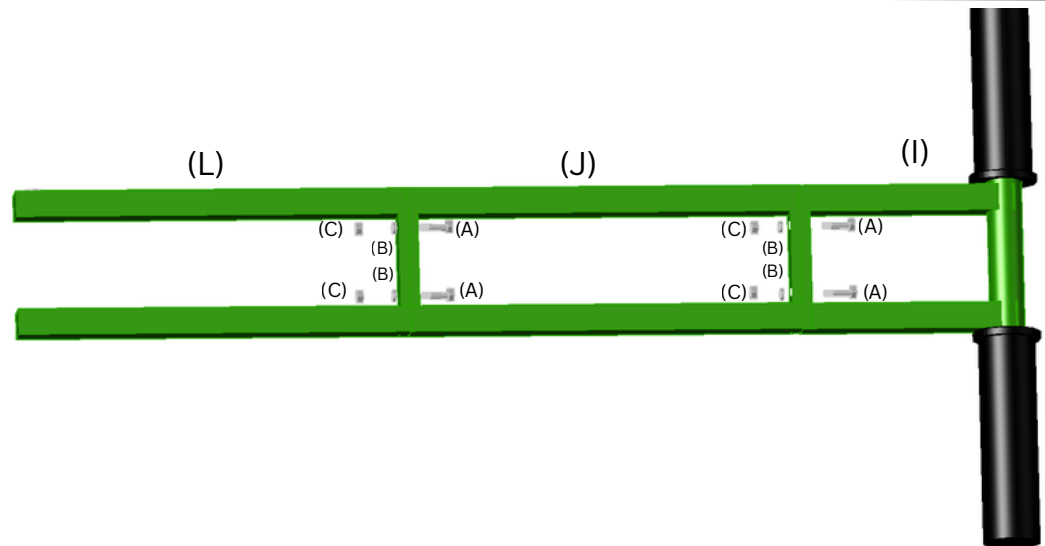


Step 2:

Once the handle is assembled, line up the aeration plate (K) so the center holes line up with the holes on the lower handle (L) connection. Next drive the plate mount (H) through the center. Then put a large flat washer (F) on both sides. Lastly, lock the large flat washers (F) in place by pushing a hair pin (G) through the holes on both ends of the plate mount (H).

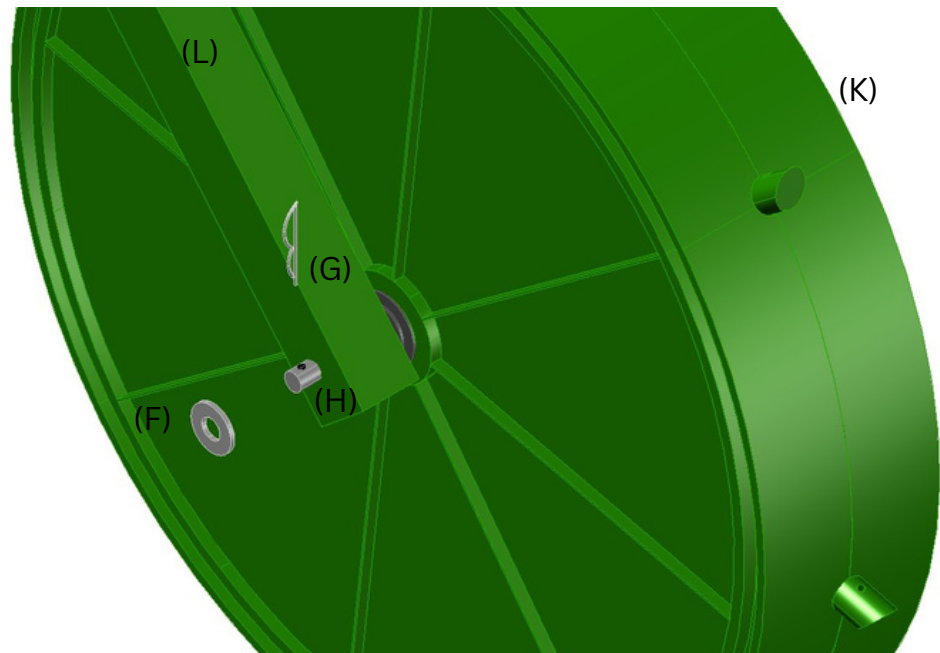

Step 3:

Once the aeration plate (K) is attached to the handle assembly, begin attaching tines (M) to the aeration plate (K) using a button head bolt (D) and small washer (E) for each tine. Tighten until snug.

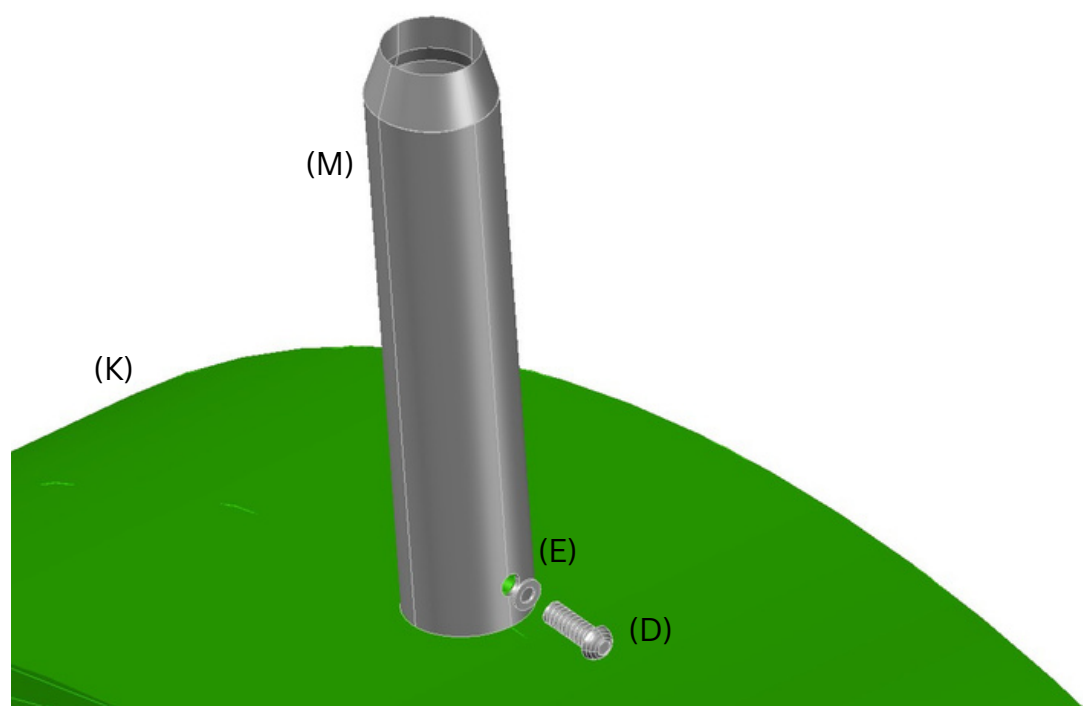

All finished! Now you are ready to use your new Landzie Aerocore. Should you need any assistance or have questions contact the sources below.

Our Customer Support Team is Here to Help!

Please give us a call at **(856) 360-4823** or send an email to **support@landzie.com** for further questions and assistance.

